


# OXMOOR® Application Note

## Oxmoor's MCS-Master Control Panel Interface To MCS-IB Interface Box

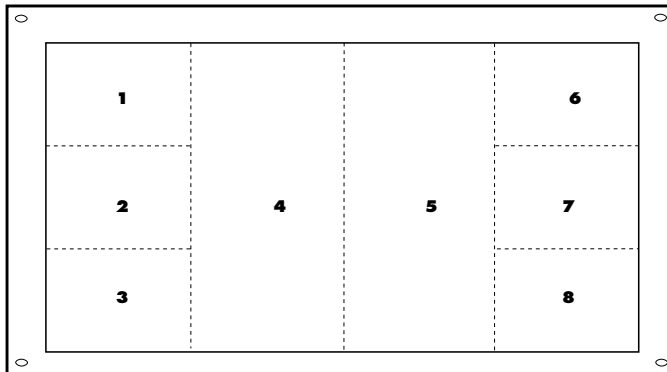

Connect the MCP to the IB by locating the two 40 pin ribbon cables attached to the MCS-MCP Master Control Panel. One cables should be labeled P1 and the other labeled P2. Remove the top of the interface box and you will see two 40 pin headers located on the PCB. Plug P1 and P2 in their respective headers and replace the top of the interface box with the 40 pin ribbons cables routed between the top lid and the back panel of the interface box.

The only other connection needed is the 9 pin ribbon cable ( PA-422 ) that goes between the Interface Box and the Main-frame. Connect the 9 pin cable between the Interface Box PA-422 OUT and the Mainframe PA-422 IN.

